

LLOYD

User's Manual

TOP LOAD FULLY AUTOMATIC WASHING MACHINE



GLWT755N40CB / GLWT755N40SS / GLWT755N40EB / GLWT755N42CB / GLWT755N42SS
GLWT755N42EB / GLWT755N50CB / GLWT755N50SS / GLWT755N50EB / GLWT755N52CB
GLWT755N52SS / GLWT755N52EB / GLWT805N42CB / GLWT805N42SS / GLWT805N42EB
GLWT805N52CB / GLWT805N52SS / GLWT805N52EB / GLWT855N40CB / GLWT855N40SS
GLWT855N40EB / GLWT855N42CB / GLWT855N42SS / GLWT855N42EB / GLWT955N40CB
GLWT955N40SS / GLWT955N40EB / GLWT955N50CB / GLWT955N50SS / GLWT955N50EB

Please read this manual carefully before operating the machine

Dear Customer,

Congratulations on being the proud owner of Lloyd Washing Machine. Your Washing Machine comes with the Lloyd Guarantee of Quality.

Lloyd takes great pride in providing its customers with perfect products that adhere to international quality standards.

Lloyd is committed to provide the ultimate customer satisfaction and the Company takes great pride in having satisfied customers.

At Lloyd, feedback and suggestions based on your product usage are greatly appreciated.

Please feel free to contact us at:
customercare@havells.com

TEAM LLOYD

Contents

| | |
|--------------------------------------|----|
| Safety Precautions | 1 |
| Part Name | 2 |
| Operation Panel Heater..... | 3 |
| Operation Panel (Non-Heater)..... | 4 |
| Variety Of Courses Heater..... | 5 |
| Variety Of Courses Non - Heater..... | 6 |
| Washing | 7 |
| Washing Options | 9 |
| Maintenance..... | 12 |
| Installation | 14 |
| Troubleshooting | 16 |
| Error Messages | 17 |
| Specifications | 17 |
| Warranty | 18 |
| E-Waste Disposal..... | 20 |
| Warranty Registration Card..... | 22 |

Safety Precautions

To prevent the risk of danger to humans or property damages, make sure to follow the precautions described below.

■ The descriptions are classified according to the degree of harm or damage caused by misuse.



WARNING May cause serious injury or death.



CAUTION May cause minor or moderate injury or property damage.



WARNING

■ For Power Plug and Cord

Prohibited matters

(To prevent fire or electric shock)

- Do not damage, modify, immoderately bend, twist, pull, or bundle them. Do not put them close to heating appliances. Do not put anything heavy on them.
- Do not connect/disconnect them with wet hand.
- Do not hold the cord when pulling out of the socket.
- Do not use a damaged cord and power plug. Also, do not use them when the socket is loose.

Matters to be observed

(To prevent fire or electric shock)

- Use a socket solely that satisfies the rating requirement. (Using in combination with other appliances could cause fire.)
- Insert the power plug all the way seated.
- Wipe the plug periodically with dry cloth. (Accumulated dust collects moisture, which may cause insulation failure, resulting in fire.)
- Pull out the cord before cleaning or when not used for a long period of time.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.

In case of emergency or operation failure, stop using the washing machine immediately and pull out the power plug.

(To prevent fume, fire or electric shock)

- No operation even at power on, accumulated dust and moisture on the power plug, abnormal sound in operation, burnt odour, etc.

→ Consult a service person for inspection and repair immediately.



■ For Tub and Main Unit

Do not allow children to use alone.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Never disassemble, repair or remodel.

(To prevent fire or abnormal operation, resulting in injury.)

Keep fire away from the main unit.

(To prevent fire)

Do not touch the tub until it completely stops.

(Your fingers may be entangled in the laundry even during slow rotation, resulting in injury.)

If the tub does not stop within 15 seconds when the lid is opened during spin cycle, switch off the washing machine immediately and call a service person.

Do not splash water over the washing machine. Do not install at a damp place or a place which may be exposed to rain, water, etc.

(To prevent electric shock or fire)

- Balcony, bathroom, etc.

Make sure to provide a ground.

(To prevent electric shock by short circuit)

- Ask a service person for grounding.

Part Name

■During Use

Do not put in flammable things or clothes with such things attached. Keep them away from the washing machine.

(To prevent explosion or fire)

- Kerosene, gasoline, benzine/thinner, alcohol, etc.

Keep away magnetic objects such as magnet from the operation panel.

(The tub may rotate even with the lid open, resulting in injury.)



CAUTION

Do not wash, rinse, or spin waterproof sheets and clothes.

(Intense vibration during spin or falling of the machine may result in injury, damages to the main unit, wall, floor, etc., damage to the laundry, water leakage, etc.)

- Raincoat, wet suit, diaper cover, car cover, waterproof sheet, etc.

Prohibited matters

- The new hose-sets supplied with the appliance are to be used and the old hose-sets should not be reused.
- Do not insert your hand or foot under the main unit.
- (To prevent from getting caught in the rotation part,


Do not climb up or put heavy things on the washing

If the lid is broken, stop using this machine immediately.

- (To prevent deformation and breakage, resulting in injury)
- Do not connect to a water heater or directly pour water of 60°C or more into the tub.
- (The plastic parts may be deformed, resulting in electrical leakage or electric shock.)
- Do not install at uneven or unstable locations.


Turn off the water faucet after operation is complete.

(To prevent water leakage)

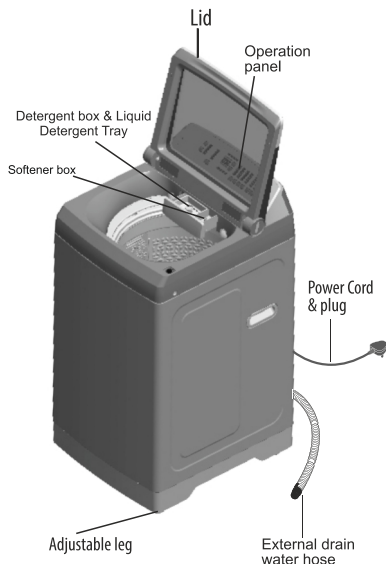

Preparations

 
1

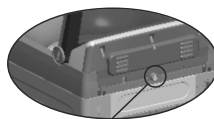

Water supply valve

Accessories

 - Water supply hose (1)




- External drain water hose (1)



- Water tap adaptor (1)



 - Anti Rat Mesh (1)




- Screw for Anti Rat Mesh cover



- Drain Clamp




Operation Panel Heater

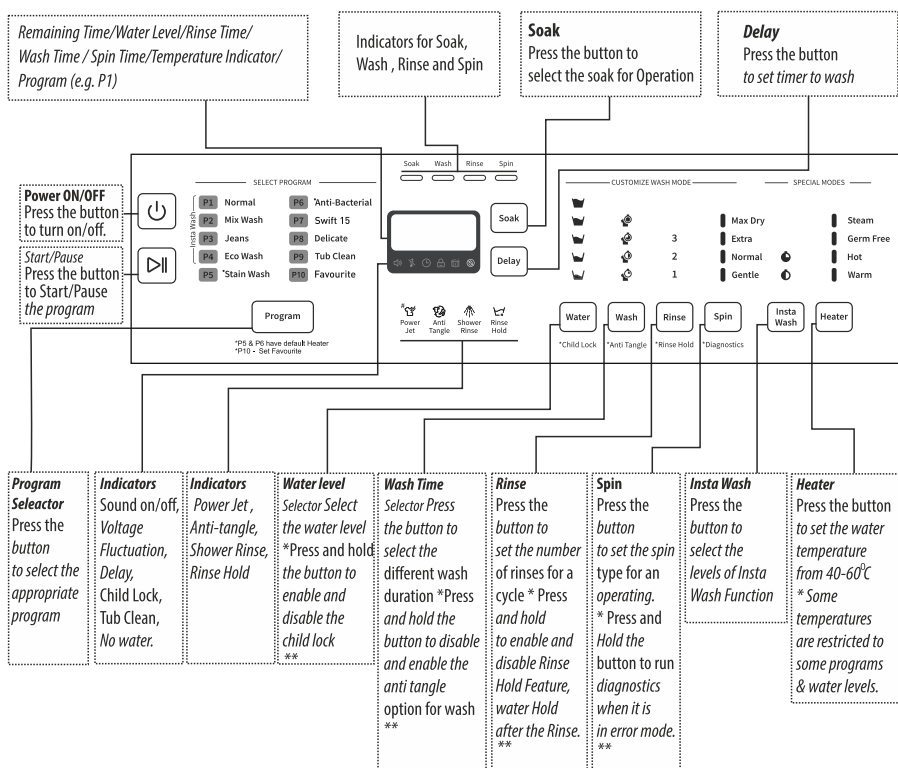

NOTE

- At power-on, **P1** Normal Wash course is displayed.
- The type of course cannot be changed after start.
- Press for 3 seconds to select long press features.
- ** All water level / Wash / Rinse / Spin are not applicable with all programs.
- # Jet spray applicable in selected model.

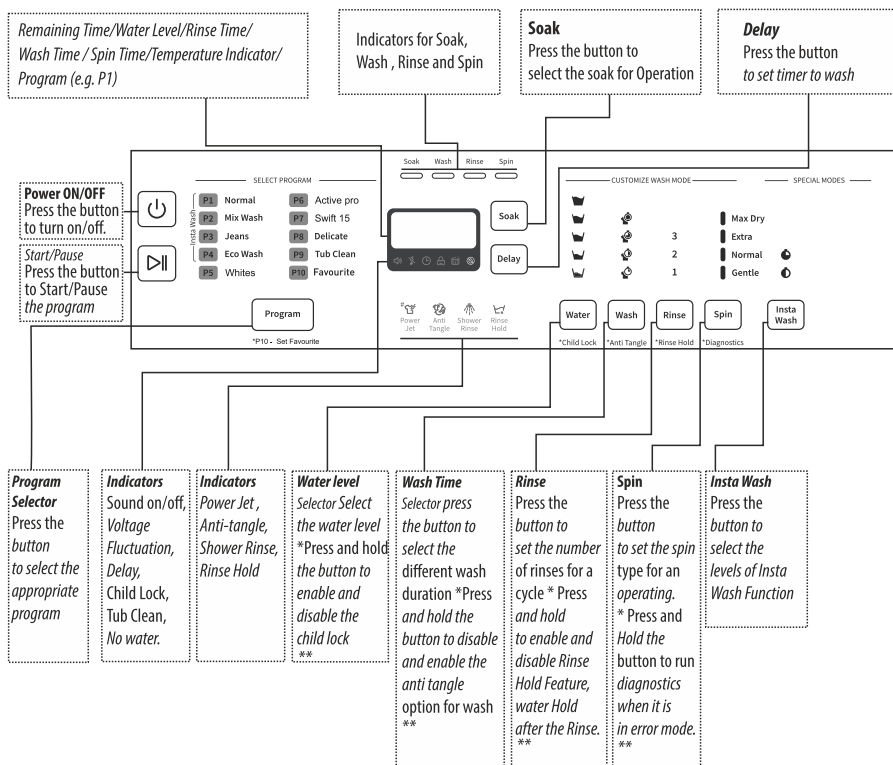


Operation Panel Non-Heater



NOTE

- At power-on, **P1** Normal Wash course is displayed.
- The type of course cannot be changed after start.
- Press for 3 seconds to select long press features.
- ** All water level / Wash / Rinse / Spin are not applicable with all programs.
- # Jet spray applicable in selected model.

Variety of Courses Heater

| Purpose | Course | Cloth type | Recommended Maximum Cloth Load | | | |
|--|-------------------|--------------------------------|--------------------------------|------------------|------------------|--------|
| | | | 7.0/7.5 kg Model | 8.0/8.5 kg Model | 9.0/9.5 kg Model | Heater |
| Everyday clothes  | P1 Normal | Daily use cotton clothes | 7.0/7.5 kg | 8.0/8.5 kg | 9.0/9.5 kg | ✓ |
| | P2 Mix Wash | Mix cotton/ synthetics clothes | 7.0/7.5 kg | 8.0/8.5 kg | 9.0/9.5 kg | ✓ |
| Heavy Wash  | P3 Jeans | Jeans/Denim, Towel & Trousers | 7.0/7.5 kg | 8.0/8.5 kg | 9.0/9.5 kg | ✓ |
| For Energy Saving | P4 Eco Wash | Normal & Cotton clothes | 7.0/7.5 kg | 8.0/8.5 kg | 9.0/9.5 kg | ✓ |
| Stain Remover | P5 Stain Wash | White Clothes, Sleepwear | 1.5 kg | 1.5 kg | 1.5 kg | 55℃ |
| Germs Fighter  | P6 Anti Bacterial | Baby Wear or dirty clothes | 1.5 kg | 1.5 kg | 1.5 kg | 60℃ |
| Light soil speedy wash | P7 Swift 15 | Undergarments & Socks | 1.5 kg | 1.5 kg | 1.5 kg | X |
| | P8 Delicate | Leggings, Lingries, Bra | 3.0 kg | 3.0 kg | 3.0 kg | X |
| Tub cleaning | P9 Tub Clean | - | - | - | - | ✓ |
| *Special Feature: Insta wash 1 Insta Wash 2 | | Light soiled clothes | 1.5 kg | 1.5 kg | 1.5 kg | X |

Preparations

NOTE

- Normal wash course is recommended for a normally soiled load at the rated capacity of this washing machine.
- Insta wash is available with Normal, Mix Wash, Jeans, Eco wash.
- Heater is not available with swift 15 and delicate courses.
- For BEE star rating program, use Eco wash course at water level 10 with wash time 7 minutes, single rinse and spin of 7 minutes.
- Heater Performance may vary according to the ambient conditions and actual temperature may differ than the defined temperature settings.

Laundry preparation and check

For clothes easily losing colour,
Wash separately.



Pretreatment

For heavily stained clothes and stained white clothes

- Hand wash them first.
- Apply stain remover to stained areas.



Pretreatment

- To prevent malfunction and drainage failure
 - Remove metallic fragments and coins.
 - Fasten buttons and close zippers.
 - Do not wash things (paper diaper, etc.) other than laundry.
- To prevent damage to clothes
 - Reverse fluffy clothes.
 - Using a brush, remove hairs of pet and person, or sands, etc.
 - Tie strings, etc.

For delicate underwear only
Use laundry nets.

- Underwire brassiere
 - Select **P3 Delicate course**
 - (To prevent the wire from sticking out)
- Lacy clothes, lingerie and stockings
- When using a net
 - Do not overpack.
 - Put the claw of the zipper into the cover.
 - (To prevent damage to clothes and main unit)
 - Do not use **Max Dry**
 - (To prevent uneven dry and wrinkle)

Variety of Courses Non-Heater

| Purpose | Course | Cloth type | Recommended Maximum Cloth Load | | |
|--|---------------|-------------------------------|--------------------------------|------------------|------------------|
| | | | 7.0/7.5 kg Model | 8.0/8.5 kg Model | 9.0/9.5 kg Model |
| Everyday clothes  | P1 Normal | Daily use cotton clothes | 7.0/7.5 kg | 8.0/8.5 kg | 9.0/9.5 kg |
| | P2 Mix Wash | Mix cotton/synthetics clothes | 7.0/7.5 kg | 8.0/8.5 kg | 9.0/9.5 kg |
| Heavy Wash  | P3 Jeans | Jeans/Denim, Towel & Trousers | 7.0/7.5 kg | 8.0/8.5 kg | 9.0/9.5 kg |
| For Energy Saving | P4 Eco Wash | Normal & Cotton clothes | 7.0/7.5 kg | 8.0/8.5 kg | 9.0/9.5 kg |
| Stain Remover | P5 Whites | White Clothes, Sleepwear | 1.5 kg | 1.5 kg | 1.5 kg |
| Germ's Fighter | P6 Active pro | Baby Wear or dirty clothes | 1.5 kg | 1.5 kg | 1.5 kg |
| Light soil speedy wash | P7 Swift 15 | Undergarments & Socks | 1.5 kg | 1.5 kg | 1.5 kg |
| | P8 Delicate | Leggings, Lingries, Bra | 3.0 kg | 3.0 kg | 3.0 kg |
| Tub cleaning | P9 Tub Clean | - | - | - | - |
| <i>*Special Feature: Insta wash 1 Insta Wash 2</i> | | | Light soiled clothes | 1.5 kg | 1.5 kg |

Preparations

NOTE

- Normal wash course is recommended for a normally soiled load at the rated capacity of this washing machine.
- Insta wash is available with Normal, Mix Wash, Jeans, Eco wash.
- For BEE star rating program, use Eco wash course at water level 10 with wash time 7 minutes, single rinse and spin of 7 minutes.

Laundry preparation and check

For clothes easily losing colour,
Wash separately.



Pre-laundry check

- To prevent malfunction and drainage failure
 - Remove metallic fragments and coins.
 - Fasten buttons and close zippers.
 - Do not wash things (paper diaper, etc.) other than laundry.
- To prevent damage to clothes
 - Reverse fluffy clothes.
 - Using a brush, remove hairs of pet and person, or sands, etc.
 - Tie strings, etc.

For delicate underwear only
Use laundry nets.

- Underwire brassiere
 - Select **P3 Delicate course**
(To prevent the wire from sticking out)
- Lacy clothes, lingerie and stockings
- When using a net
 - Do not overpack.
 - Put the claw of the zipper into the cover.
(To prevent damage to clothes and main unit)
 - Do not use **Max Dry**
(To prevent uneven dry and wrinkle)



Pretreatments

For heavily stained clothes and stained white clothes

- Hand wash them first.
- Apply stain remover to stained areas.

Washing

- Preparation: ●Check whether the washing machine has been properly installed.
●Turn on the water faucet.

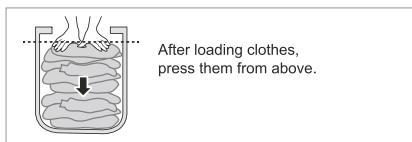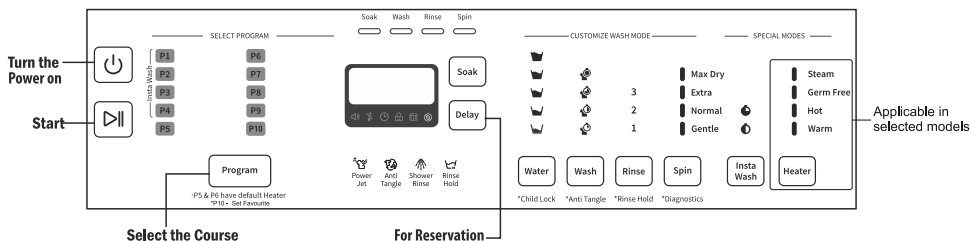

1 **turn the power on.**

2 According to the water level, **put in the detergent.**
(Follow the instruction described on each detergent's container.)



3 **Close the lid.**

4 According to the type of laundry and soil, **Select the course**
(e.g.) Normal Wash course

■For reservation

After selecting the course, select how many hours later you wish to complete the entire operations.



- After reservation is set
- Change or cancel
→ Press "Power" Off and do the procedure again.
- Check the course
→ Press "Program".
- Check the reservation time
→ Press "Delay".
- Check the water level
→ Press "Water Level".

■For water selection

Select the water level
*After start the operation child lock will be activated and deactivated by long press and hold Water for 5 second
*Some water levels are not applicable. with selected courses.

■For wash time selection

Press the button to select the different wash duration.
*Long press and hold to disable and enable the anti-tangle option for wash.

■For Number of Rinse selection

Press the button to set the number of Rinse for a cycle (From 1-3)
*Long press and hold to enable & disable Rinse Hold feature, water hold after the Rinse

■For Spin selection

Press the button to set the Spin time for an operation (from Gentle to Max Dry)
* Long press for error code diagnostics with help of Havells sync mobile application.

5 **Start.**
When water is not selected, the tub rotates without water and measure the load
(approx. 60 seconds)

Water begins to be supplied.

Water level indication
Press water level (approx. 7 seconds)

Wash time indication
Press wash (approx. 7 seconds)

Rinse indication
Press Rinse (approx. 7 seconds)


Spin indication
Press Spin (approx. 7 seconds)

NOTE

- Turn the tub by hand if it is difficult to put out or put in the lint filter.
- In stain wash, anti-bacterial, quick courses are selected, the water level is displayed immediately.
- Program modes may vary according to the model.

NOTE

- When powdered detergent is poorly soluble, dissolve in warm water before putting in.

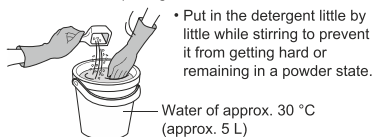

- If there are many thick or large clothes (jeans, sheets, etc.) in the tub, the detergent may remain undissolved. Dissolve the detergent according to the above method, or reduce the amount of laundry.
- If excessive bubbles form, reduce the amount of detergent or change the detergent.

Using softener

Put the softener in the softener inlet according to the water level indication.


- Automatically added on the final rinse.
- To add in operation, press "Pause" first.



- Do not use a separated or solidified softener.
- Softener easily becomes hard. Do not leave in the softener compartment for many hours (12 hours or longer).

Concentrated type

Dissolve softener.

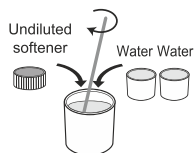

- Well mix** in another container before putting in. (To facilitate smooth flow)
- Follow each softener's instructions.

NOTE

- If "Pause" is pressed during spin cycle, the softener will be added too early and its effectiveness will decrease.
- The softener will not be added automatically if not put in by the time "Wash" cycle is complete.

Using Liquid Detergent

- Pour the liquid detergent in the liquid detergent tray.
- Do not use solidified liquid detergent.
- Liquid detergent easily becomes hard. Do not leave liquid detergent in the liquid detergent for many hours (8 hours or longer)




Using bleach

Oxygen powder bleach

Put the bleach in directly during water supply after start.

*Follow each bleach's instructions.

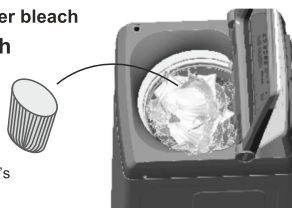

NOTE

- Do not use a bleach for **P9** Delicate Course
- Do not use a chlorine bleach for coloured and printed clothes. (Loss of colour may result.)
- If a chlorine bleach is used, wash the tub with **P9** Tub clean without bleach.


Washing Options

P3 Jeans

Preparation: Turn on the water faucet.

1  **turn the power on.**

2 According to the water level, **put in the detergent.**
(Follow the instruction described on each detergent's container.)

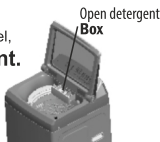

3 **Close the lid.**

4  According to the type of laundry and soil, **Select P3 Jeans**



5  **Start.**

P8 Delicate

This course gently washes delicate clothes and stylish garments.

Load the laundry.

Put in the laundry evenly.



- First, put in things that easily float on the water, and press the laundry from above.
- Use a commercially sold net for delicate clothes.
- Amount of laundry that can be washed at one time is upto 3 kg at a time.


Preparation: Turn on the water faucet.

1  **Turn the power on.**

2 According to the water level, **put in the detergent.**
(Follow the instruction described on each detergent's container.)



3 **Close the lid.**

4  According to the type of laundry and soil, **Select P8 Delicate Course**



5  **Start.**

Insta Wash

Preparation: Turn on the water faucet.


1  **After loading the laundry, turn the power on.**

2  Select any Program from P1-P4 **Select P1 Normal Course**









3  **Select the insta wash**
Level 1 & Level 2 : Select according to wash time requirement

4  **After closing the lid, start.**


The operation is complete with the buzzer sound.

Washing Options - Heater

P5 Stain Wash







- 1  Turn the power on.
- 2 According to the water level, **put in the detergent.**
(Follow the instruction described on each detergent's container.)
 Open detergent Box
- 3 Close the lid.
- 4  According to the type of laundry and soil, Select P5 Stain Wash

- 5  **Temperature Setting**
Default Heater temperature is 55° C . Default temperature can be changed by pressing Heater button.
- 6  Start.

NOTE

- Use a liquid detergent for stylish garments.
- Do not use a bleach.
- *Programs applicable only for Heater models.

P6 Anti-Bacterial

- **Clothes that can be dried**






 - Material: Synthetic fibre
 - Weight: 1.5 kg max.
- 1  turn the power on.
 - 2 According to the water level, **put in the detergent.**
(Follow the instruction described on each detergent's container.)
 Open detergent Box
 - 3 Close the lid.
 - 4  Select P6 Anti-Bacterial

 - 5  **Temperature Setting**
Default Heater temperature is 60° C. Default temperature can be changed by pressing Heater button.
 - 6  Start.

NOTE

- The laundry may not be sufficiently dried depending on the amount of the load, type of clothes, temperature, and installation condition of the washing machine.

Wash/Rinse

Preparation: Turn on the water faucet.

- 1  After loading the laundry, **turn the power on.**
- 2 According to the purpose,
 Unselect Rinse and Spin operation.
 Unselect Wash and Spin operation.
• Change the water level as necessary.
- 3  After closing the lid, **start.**

The operation is complete with the buzzer sound.


Washing Options - Non Heater

P5 Whites


Preparation: Turn on the water faucet.

1  turn the power on.

2 According to the water level,
put in the detergent.
(Follow the instruction
described on each
detergent's container.)

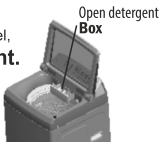

3 Close the lid.

4  According to the type of laundry and soil,
Select P5 Whites

BP 58

5  Start.

P6 Active Pro


Preparation: Turn on the water faucet.

1  turn the power on.

2 According to the water level,
put in the detergent.
(Follow the instruction
described on each
detergent's container.)



3 Close the lid.

4  According to the type of laundry and soil,
Select P6 Active Pro




BP 68

5  Start.



Convenient Functions

Spin

Preparation: Turn on the water faucet.

- 1  After loading the laundry, **turn the power on.**
- 2  Press Spin.
(By Default 7 Mins Spin)
To select other Spin Level
Press the Key again.
- 3  After closing the lid, Press **Start**
⋮
The operation is complete with the buzzer sound.

Cancelling end buzzer

-  Press  Press and hold for 3 seconds.
- To reset, do the same procedure.
- 

Setting Child Lock

If the lid is opened during operation with this function activated, the buzzer continues to beep with E03 error on the display until the lid is closed.

Power on/off will be operational in child lock mode
all other function will be locked.

(To prevent children from falling in the tub and drowning)

- This function does not lock the lid and Power button operation.
- Set the drain hose in the condition where water can be drained.

When machine is in On condition and washing is going on then press water for 3 seconds and child lock will be activated

Water

**Press
3seconds.**




- To cancel, do the same procedure.

Maintenance

Lint filter

After each operation

- 1 Hold the upper part and remove.

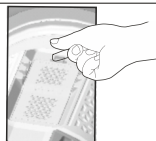

- 2 Open the filter and remove the lint.




- If removal is difficult, soak the filter in water and wash.



Attach to the original position.

- 3 
- 4 

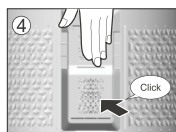

NOTE

- Do not wash laundry with the filter removed.
(To prevent damage to clothes)

■If removing the filter is difficult

Turn the tub. (See left.)

■If the filter is broken

Buy a new filter at nearest Lloyd Service Centre.

When Necessary

Water supply filter

If water does not flow smoothly

- Make sure to observe the following procedure to prevent spatter of water.

- 1 Turn off the faucet.** 
- 2  Turn the power on.**
- 3  After closing the lid, start.**
- 4  After approx. 40 seconds, turn the power off.**
- 5 Loosen the nut.** 
- 6 Remove the hose and water supply filter.** 
- 7 Remove the dust of water supply filter.** 

Main unit/Lid

If detergent or softener stains are found

Wipe with a soft cloth.

(To prevent damage to resin or metal corrosion)

- For heavy soil, use a neutral detergent for kitchen and wipe off.
- (Do not use other detergents or directly pour water.)

Tub Clean

Tub Clean Reminder

After operation is complete,



 





When it needs to clean the drum, Machine will give the Alarm for it, selected model Clean program.



When Tub Clean is due after 50 cycles, this icon will glow. Once you run the Tub Clean program, It will turn off the glow of the icon.

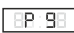Once a month (Wash)

Preparation: Turn on the water faucet.

- 1  Turn the power on without laundry in the tub.**
- 2  Select P9 Tub clean course.**

- 3  Start.**
- 4  When water supply is complete, pause.**
- 5 Put the Puro Clean Descaling powder in the tub.** 
Approx. 200 ml
- 6  After closing the lid, start.**

The operation is complete after approx. 1 hours.

When Necessary

Installation

■ If the installation, test run and inspection of the washing machine are not carried out following this installation method, Lloyd will not be liable for any accident or damage caused.

■ Make sure to ask a service person for installation. Do not install by yourself.

1. Check the installation location.

■ Avoid the following locations for installation.

- Locations where there is a possibility of freezing.
- Locations exposed to direct sunlight
(To prevent malfunction or deformation)
- Uneven or unstable locations
(on blocks, timbers, table with wheels attached, etc.)


NOTE

- Do not obstruct openings of the bottom face with carpet, etc.



2. Attach the Anti-Ratmesh

Preparation: Set a cardboard, etc. and lay the washing machine on it, avoiding product damage and deformation. (Face the front side down.)

1 Insert along the guides, and set 2 holes to the corresponding projections.

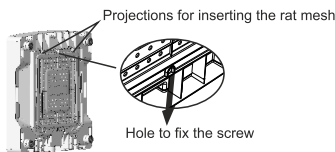


2 Fix with screw.

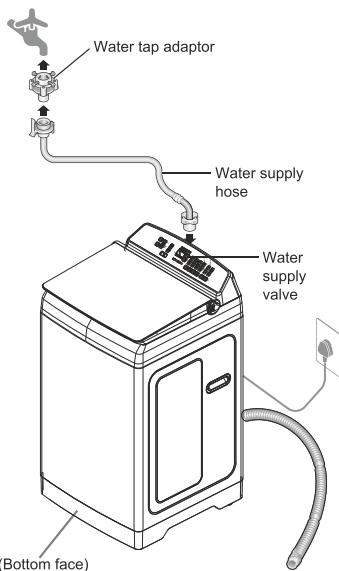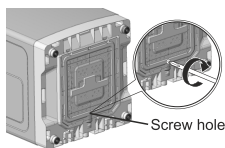

Installation


3. Attach the external drain water hose.

1 Connect to the connection port.

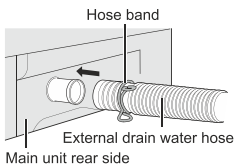


- Insert all the way seated.

2 Slide the hose band in the arrow direction.

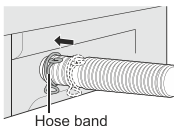


■ Hose arrangement

 
- Do not put the hose tip under the water.




- The height should be 10 cm or less.

 

 - The extension length should be 3 m or less.




4. Connect the water tap adaptor and water supply hose.

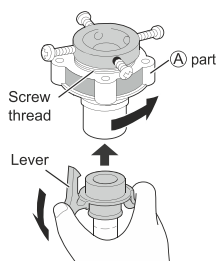

1 Connect the water tap adaptor to the faucet.

- 1) Turn (A) part to the left until approx. 4 mm of the thread becomes visible.
- 2) Loosen 4 screws.
- 3) Connect to the faucet and tighten the screws.

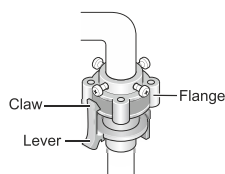

2


Fix.

- Turn (A) part to the right side and tighten securely.
(To prevent water leak)

3

Connect the water supply hose to the water tap adaptor.

- Pushing down the lever, insert and hook the claw of the lever on the flange of the adaptor.

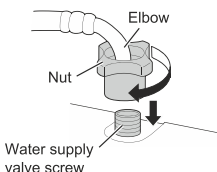

4

Connect the water supply hose to the water supply valve screw.

- Slightly lift up the elbow and tighten the nut.
- Check if the elbow is not loose.



CAUTION

- Tighten the nut firmly.
(To prevent water leak)
- Do not forcibly bend the water supply hose.
(To prevent water leak caused by the bent hose)

 
5. Connect the power plug and grounding wire.

- Ask a service person for grounding work.

6. Check the horizontal state.

■ Adjusting height with the adjustable leg knob.

- 1) Turn the adjustable leg knob to the left side and loosen as indicated with the left pointing arrow. Then, turn the adjustable leg to adjust the levelness.
- 2) Turn the adjustable leg knob to the right side and tighten securely as indicated with the right pointing arrow.

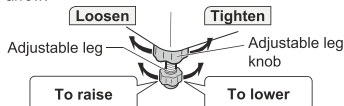

■ Level indicator

Use the Level indicator to align the machine properly by bringing the bubble at center of this



7. Perform a trial operation.

- Check if there is no water leakage, abnormal sound or error messages.

The appliance is intended for Domestic/Household use only and not for any similar applications such as:

- a) staff kitchen area in shops, offices and other working environments.
- b) farm houses.
- c) by clients in hotels, motels and other residential type environments.
- d) bed and breakfast type environments.
- e) areas for communal use in blocks of flats or in launderettes.

Troubleshooting

Check the following before requesting service.

| Symptoms | | Checkpoints |
|------------|---|---|
| Time | Remaining time fluctuates. | <ul style="list-style-type: none"> Remaining time is corrected during the process and displayed. (Time indication is an approximation.) |
| | No operation. | <ul style="list-style-type: none"> Power failure? Is the lid closed completely? Is the power fuse or the breaker cut off? Is the power plug plugged in completely? Is the water faucet turned on? Is the "Start" button pressed? Has the Delay program been set? |
| Main unit | Cannot change the operation contents. (after start) | <ul style="list-style-type: none"> The contents can be changed in Wash process by pressing "Pause". To change the course or to change the contents after Rinse process, turn the power off and then on again. |
| | No water supply. | <ul style="list-style-type: none"> Is the water faucet turned on? Water failure? Is the water supply filter clogged with dust? |
| Wash | Water is supplied in the middle of Wash process. | <ul style="list-style-type: none"> When level goes down, water is supplied automatically. With large amount of laundry, water is supplied several times automatically. |
| | The water level is too high for the amount of laundry. | <ul style="list-style-type: none"> If the laundry is wet or if there is water in the tub before operation, the water level may be higher. |
| | The water level is too low for the amount of laundry. | <ul style="list-style-type: none"> With light clothes (synthetic fibre, etc.), the water level may be lower. |
| | The operation started with Rinse process, however, water is not supplied. | <ul style="list-style-type: none"> If there is no water in the tub, water is supplied after spin. If there is water in the tub, water is supplied after water discharge. |
| Rinse/Spin | The operation suddenly changes to rinse process in the middle of spin process./ Only spin is desired, however, the operation starts with rinse. | <ul style="list-style-type: none"> If the laundry is unevenly placed in the tub, the machine starts to rinse and automatically corrects the arrangement. (Put the laundry as evenly as possible.) |
| | Spinning does not work | <ul style="list-style-type: none"> Is the laundry spread out evenly in the washer? Is the washer set on a sturdy flat surface? |
| | Spinning makes loud noises and vibrations | <ul style="list-style-type: none"> Check for the coins, pins etc. in the pockets of the clothes. Remove the unnecessary stuffs around the washing machine. Check if the floor is solid and does not flex. |
| | Drainage failure | <ul style="list-style-type: none"> Is the drain hose placed correctly? Is the drain hose bent, is the internal part of the hose or drain pump clogged with impurities |
| | Irregular rotation during spin. | <ul style="list-style-type: none"> The tub rotation speed is adjusted to spread the laundry evenly |
| | Power failure./ The breaker has tripped. | <ul style="list-style-type: none"> The operation will stop. When power is recovered, the operation will resume. ("Auto Restart" indicator lights up.) |
| Others | Water failure. | <ul style="list-style-type: none"> After water supply is recovered, remove the water supply hose to release muddy water from the faucet, and start the operation. |
| | The water leaks at the water supply hose connector | <ul style="list-style-type: none"> Fix the faucet or connect the water supply hose again correctly Also check if the start/hold button is pressed or not if not then press it |
| | Operation does not finish even after the reservation time. | <ul style="list-style-type: none"> Operation time will become longer if laundry leans to one side or water supply or drainage is ill-conditioned. |
| | Detergent is not dispensed completely or not dispensed at all | <ul style="list-style-type: none"> Too much detergent is used for the clothes Detergent Box is clogged with solid detergent. |

When Necessary

Error Messages

| No. | Error code | Error Description | How to resolve Error |
|-----|------------|------------------------------------|--|
| 1 | E1 | Alarm for water filling timeout | Open the water tap/clean the inlet filter/straighten the water supply hose then open lid then close lid to resolve the error |
| 2 | E2 | Alarm for drainage timeout | Clean the drain hose/lay the drain hose down next to a floor drain then open and close the lid |
| 3 | E3 | Alarm for opening lid | Close the lid properly |
| 4 | E4 | Alarm for unbalance | Redistribute the laundry by hand and level the appliance by using spirit level. |
| 5 | E5 | Safety Switch Malfunction | Power off the machine and call the service centre |
| 6 | E6 | Water overflow | Turn off the water supply/ Lay the drain hose down to a floor drain |
| 7 | F3 | Zero crossing circuit failure | Switch off & on appliance, wait to resume, it will try to auto resolve |
| 8 | F2 | Temperature sensor error | Switch off & on appliance, wait to resume, it will try to auto resolve |
| 9 | F4 | Heater malfunction | Switch off & on appliance, wait to resume, it will try to auto resolve |
| 10 | F5 | Fuzzy/ load sensing failure | Switch off & on appliance, wait to resume, it will try to auto resolve |
| 11 | F8 | Water Level Sensor Issue | Water Level Sensor Issue, switch off appliance and Call the LLOYD Service Centre. |
| 12 | FrH | Electronic Controller Over Voltage | |
| 13 | FrL | Electronic Controller low Voltage | Abnormal low voltage, wait to resume normal voltage it will try to resolve itself |

Note: When Issue persists after given rectification steps, call LLOYD service centre

If the supply cord is damaged it must be replaced by manufacturer's service agent or similarly qualified person in order to avoid a hazard

When Necessary

Specifications

| MODEL | GLWT955N40CB / GLWT955N40EB/ GLWT955N40SS | GLWT955N50CB / GLWT955N50EB / GLWT955N50SS | GLWT855N42CB / GLWT855N42EB / GLWT855N42SS | GLWT855N40CB / GLWT855N40EB / GLWT855N40SS | GLWT805N52CB / GLWT805N52EB / GLWT805N52SS |
|----------------------------|--|--|--|--|--|
| RATED CAPACITY | 9.5 Kg | 9.5 Kg | 8.5 Kg | 8.5 Kg | 8.0 Kg |
| POWER SUPPLY | 230V~ / 50Hz | 230V~ / 50Hz | 230V~ / 50Hz | 230V~ / 50Hz | 230V~ / 50Hz |
| RATED POWER | 1450 W | 530 W | 1450 W | 1450 W | 450 W |
| NET DIMENSION (WXDXH) | 55.0 x 57.2 x 105.7 cm | 55.0 x 57.2 x 105.7 cm | 55.0 x 57.2 x 102.7 cm | 55.0 x 57.2 x 102.7 cm | 55.0 x 57.2 x 102.7 cm |
| GRADE OF WATER PROTECTION | IPX4 | IPX4 | IPX4 | IPX4 | IPX4 |
| Net Wt. (kg) | 34.5 Kg | 34.5 Kg | 34 Kg | 34 Kg | 34 Kg |
| Pressure of tap water(Mpa) | 0.03-1 Mpa (0.3-10 Kgf/cm) | 0.03-1 Mpa (0.3-10 Kgf/cm) | 0.03-1 Mpa (0.3-10 Kgf/cm) | 0.03-1 Mpa (0.3-10 Kgf/cm) | 0.03-1 Mpa (0.3-10 Kgf/cm) |
| MODEL | GLWT805N42CB / GLWT805N42EB / GLWT805N42SS | GLWT755N52CB / GLWT755N52EB/ GLWT755N52SS | GLWT755N42CB / GLWT755N42EB/ GLWT755N42SS | GLWT755N40CB / GLWT755N40EB/ GLWT755N40SS | GLWT755N50CB / GLWT755N50EB/ GLWT755N50SS |
| RATED CAPACITY | 8.0 Kg | 7.5 kg | 7.5 kg | 7.5 kg | 7.5 Kg |
| POWER SUPPLY | 230V~ / 50Hz | 230V~ / 50Hz | 230V~ / 50Hz | 230V~ / 50Hz | 230V~ / 50Hz |
| RATED POWER | 1450 W | 430 W | 1450 W | 1450 W | 430 W |
| NET DIMENSION (WXDXH) | 55.0 x 57.2 x 102.7 cm | 55.0 x 57.2 x 99.7 cm | 55.0 x 57.2 x 99.7 cm | 55.0 x 57.2 x 99.7 cm | 55.0 x 57.2 x 99.7 cm |
| GRADE OF WATER PROTECTION | IPX4 | IPX4 | IPX4 | IPX4 | IPX4 |
| Net Wt. (kg) | 34 Kg | 33.5 Kg | 33.5 Kg | 33.5 Kg | 33.5 Kg |
| Pressure of tap water(Mpa) | 0.03-1 Mpa (0.3-10 Kgf/cm) | 0.03-1 Mpa (0.3-10 Kgf/cm) | 0.03-1 Mpa (0.3-10 Kgf/cm) | 0.03-1 Mpa (0.3-10 Kgf/cm) | 0.03-1 Mpa (0.3-10 Kgf/cm) |

Packaging List: 1 N Washing Machine, 1 N User Manual, 1 N Rat Mesh, 1 N Water Inlet Pipe, 1N Screw, 1 N Drain Hose & 1 N Drain Hose Clip

Note: For the best performance of detergent dispenser use the water pressure in the range of 0.2 to 0.3 MPa.

WARRANTY

A. Warranty Period:

Havells India Ltd. (Company") hereby offers a limited warranty ("Warranty") for its Lloyd branded Washing Machine ("Product") against manufacturing defect/s for a period of 24 months (Two Year) from the date of invoice on the terms and conditions provided hereinafter.

B. Warranty Terms & Conditions:

1. To claim Warranty, it is mandatory that the customer provides the original invoice and wherever possible original Warranty certificate (duly signed and stamped by the selling dealer) must be presented by the customer.
2. To claim warranty service, customer needs to log in his complaint with the customer care cell.
3. This Warranty is limited to the first purchaser of the Product only.
4. This Warranty is valid and applicable only in respect of the Product purchased in India only.
5. This Warranty cannot be clubbed with any promotional limited warranty scheme prevalent on the date of the invoice unless specifically provided for in any special Warranty schemes.
6. To avail any Extended/Additional Warranty provided by the Company, customer should comply with the Product registration and other Terms and Conditions of the Extended/Additional Warranty as available on the website- www.mylloyd.com.
7. The Warranty period specified above shall include the period when the Product is not in use, time taken for repairs, replacements, breakdowns, transit time, etc. No notice of expiry period of Warranty will be given by the Company.
8. It is clarified that after one year from the date of invoice, Company's responsibility to continue to provide additional Warranty services in terms as agreed upon shall however be limited only to supply of the parts free of cost and any cost(s) incurred towards labor, transportation and any other incidental expenditure for providing the said Warranty services shall be borne by the customer
9. The decision to repair or replace any part of the product shall be at the sole discretion of the Company. In the event of repairs or replacement of any part carried out during the said Warranty Period, the Warranty shall thereafter continue only for the unexpired period of the Warranty.
10. In the event of any unforeseen circumstance, and/or spares are not available, the Company's prevailing depreciation rules will be binding on the customer to accept as a commercial solution in lieu of repairs. The depreciation rule will be applicable after one year from the date of purchase.
11. If repair or replacement of component/part is rendered illegal because of subsequent law changes, Company will have no responsibility for procuring replacement parts if doing so would be commercially impractical.
12. To avail Warranty services for the Product, any recommendations made by the Company's visiting Authorized Service Representative shall be complied by the customer and if that recommendation requires repair of any electrical installations, wiring or of any third party product attached to the Product, it shall be first undertaken by the customer at his entire cost. Thereafter, the Warranty for the Product can be availed.
13. Company shall not be held liable or be deemed to be in default for any delay or failure in performance resulting directly or indirectly from causes beyond its reasonable control including delay in repairing due to non-availability of any component or accessory, labor problem, restrictions and regulations of the government, public movement, war and any unavoidable circumstances, specially vis-a-vis the import of supplies and raw material.

14. In case of any request to change the location where the Product has been initially installed during the Warranty, the customer will log in a request with customer care cell to ensure that the dismantling / inspection of the Product is done by Company's Authorized Service Representative at the existing location. Thereafter the customer shall transport the Product to the new location at his own cost and consequences for re-installation of the Product. The customer shall again log in the request with customer care cell for such re-installation which shall be undertaken by Company's Authorized Service Representative. Such dismantling and re-installation, undertaken during the Warranty period shall be done on chargeable basis. Any damage to the Product caused on account of such transit shall be at customer's cost and risk and Company shall not be held responsible in any manner whatsoever.
15. In case of any additional warranty offered by the Company on the Motor on the date of purchase/invoice, the Company shall be responsible to only supply the motor free of cost to the customer and any cost(s) incurred towards labour, transportation, & any other incidental expenditure shall be borne by the customer.
16. The Warranty provided herein is in lieu of implied conditions and warranties under the law and is confined to the repair or replacement of defective parts and does not cover any economic loss, commercial loss, consequential or resulting liability, damage to the property, or any other harm or loss.
17. None of the employees and /or Authorized Dealers of the Company have any authority whatsoever to vary the terms and conditions of this Warranty.
18. In the event that any terms and condition of this Warranty becomes invalid and/or unenforceable, the remaining terms and provisions hereof shall continue in full force and effect.

Exclusions to Warranty:

- If the Product is serviced, repaired, installed, de-installed, dismantled or otherwise attended to by any person other than the Authorized Service Representative of the Company.
- If customer violates Warranty Terms and Conditions, instruction manual guidelines, recommendations of Authorised Service Representative and/ or operates the Product otherwise than as per Product specifications.
- If the original serial number on the Product or any part thereof is damaged, defaced, obliterated or erased/ tampered with or if Product is refurbished/modified for any reason whatsoever.
- If the Product is operated in conditions otherwise than normal conditions (e.g., abnormal voltage surge, extreme heat, corrosive/alkaline/acidic atmosphere, dust ,damage from sea water, pollution ,chemical environment ,sulfur in the air, installation near the open drainage system etc.).
- If the Product is used for any commercial purpose.
- Any harm caused due to accident, negligence, improper maintenance, mishandling, tampering, incurred in transit by the customer or which can be attributed to the fault of the customer.
- Any harm resulting from any unforeseeable circumstances such as force majeure event etc.;
- Any harm caused due to any defect in any electrical/civil installation(s), wiring or third party products.
- Any liability resulting from any un-authorized adaptations or adjustments to the Product or due to usage of a third party apparatus or equipment.
- Any damage to the Product due to household pets, rodent or any other insect/animals.
- External parts, accessories and plastic parts of the Product;
- Normal wear & tear of parts.

E-WASTE DISPOSAL

Environmental Compliances:

As per the rules laid down by the Government for environmental concern & safety, your product has been made to comply and conform to the respective regulation as listed below. This product falls under the E-WASTE (MANAGEMENT) RULES, 2022 with all amendments of Ministry of Environment, Forest & Climate change.

RoHS Declaration:



This Product is in conformity with requirements of Rule 16 of the E-WASTE (MANAGEMENT) RULES, 2022 with all amendments. The content of hazardous substances with the exemption of the applications listed in SCHEDULE II of the E-Waste (Management) Rules, 2022 with all amendments is as follows:

- Lead (Pb): not over 0.1% by weight;
- Mercury (Hg): not over 0.1% by weight;
- Cadmium (Cd): not over 0.01% by weight;
- Hexavalent Chromium (Cr6+): not over 0.1% by weight;
- Polybrominated Biphenyls (PBBs): not over 0.1% by weight;
- Polybrominated Diphenyl Ethers (PBDEs): not over 0.1% by weight.

Do's and Don'ts for disposal of product:



1.) Do's:

- Always drop your used electrical/electronic products, defective spares or any accessories and packaging materials after the end of their life at the nearest authorized collection point/center.
- Make sure that your electronic products are recycled only by authorized recyclers/dismantlers.
- Segregate the packaging materials according to their respective waste disposal options and sorting for recycling.
- Protect the glass surface of any electronic product to avoid breakage.

2.) Don'ts:

- Never dismantle your electronic product yourself.
- Never sell or give E-Waste to informal and unorganized sectors like local scrap dealer/rag pickers.
- Never dump E-Waste in garbage bins or municipal solid waste stream.
- Do not dispose your product as unsorted municipal waste.

For more information on safe disposal, recycling and collection point, please call customer care number 0804-577-5666

Or Visit our website <https://www.havells.com/e-waste-awareness>
or write a email to ewaste@havells.com

Havells India Ltd.
Warranty Registration Card (Washing Machine)
Service Centre Copy

Model No:

Serial No

Please Refer Sticker On Back Cover Of Your Product

Purchase Date

Day Month Year

Bill No.

| |
|-------------------------|
| Dealer's Name & Address |
| |
| |
| Signature |

Customer Signature _____

(Please Fill In, Tear off, Fold and Mail this form to Reach us within 10 days of the Product Purchase.)

We welcome your Valuable Suggestions, if any, to Improve our Products and Services :

Customer Code:

Branch:

Havells India Ltd.

Havells India Ltd.
Warranty Registration Card (Washing Machine)
Customer Copy

Model No:

Serial No

Please Refer Sticker On Back Cover Of Your Product

Purchase Date

Day Month Year

Bill No.

| |
|-------------------------|
| Dealer's Name & Address |
| |
| |
| Signature |

Customer Signature _____

(Please Fill In, Tear off, Fold and Mail this form to Reach us within 10 days of the Product Purchase.)

We welcome your Valuable Suggestions, if any, to Improve our Products and Services :

Customer Code:

Branch:

Havells India Ltd.

LLOYD

Havells India Ltd.

Registered Office: 904, Surya Kiran Building, K.G. Marg, New Delhi - 110001 (INDIA)

For Consumer Complaint, Contact: Consumer Care Executive **Havells India Ltd.**

QRG Towers, 2D, Sector - 126, Expressway, Noida - 201304 U.P. (INDIA)

Email: customercare@havells.com

Customer Care No.: 0804-577-5666